

INFLATABLE SCREEN SETUP

STEP 1: UNROLL SCREEN AND UNCOIL TETHERS

Unroll screen on grass or tarp. Unfold the screen so it sits like a while clamshell (folded in half) with the white projection surface on the inside (so it doesn't touch the ground). Identify the top and bottom of the screen. The bottom of the screen has the air intake for the air blower. Be sure the ground is smooth, level and free of glass, rocks or other debris. Uncoil the white tethers from four corners of screen, top and bottom. Screen should be at least 10' away from structures and objects such as fences, buildings, trees, overhead branches, power lines, electrical wires, walls, etc. Choose a location where no direct light will hit the projection surface, ideally with the sun to the side and rear of the screen.

ATTENTION: DO NOT drag the screen across concrete, pavement or other rough surfaces.



Rear side of screen

Uncoiled white tethers


Properly unfolded screen

Front side of screen with white projection surface inside of clamshell like form

STEP 2: SECURE STAKES AND TETHERS

Place stakes in ground roughly 10' from the corners of the screen at 135 degree angles. Clip the tethers from the corners of the screen to the stakes. There are eight tethers total, four attached to the top of the screen, four to the bottom. Make sure bottom tethers are taught when connected to stakes, but leave about 3 feet of slack in the top tethers. Tether length can be adjusted using the black sliders on each tether.

ATTENTION: Be aware of any underground pipes or utilities before driving stakes into the ground.

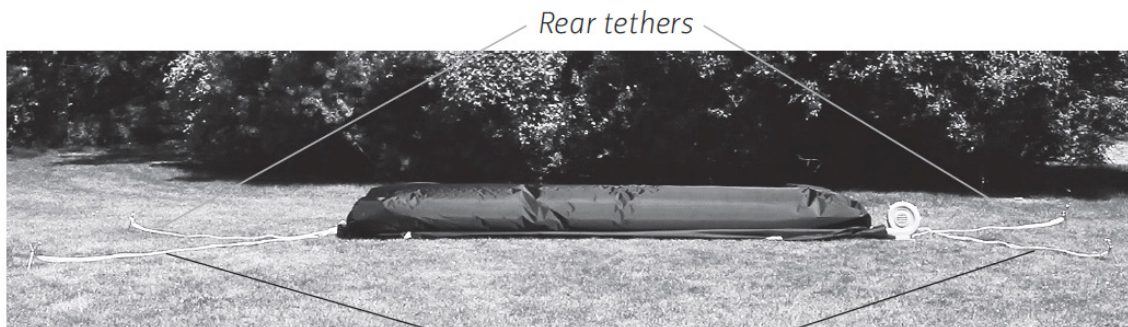

Rear tethers

Front tethers

Properly attached stakes and tethers



Attach tethers to stakes with clips

STEP 3: ATTACH AIR BLOWER TO SCREEN

With the Muffler Box over the blower, attach the air blower to the intake sleeve on the side of the inflatable frame using the cinch cord. Plug in the air blower. Be sure the cinch cord is secured tightly around the coupling of the air blower. Place the air blower in an area where it will not suck in dirt or leaves. Do not use near water or on very wet surfaces. Do not block vents on blower.



Intake vent (left), and air blower (right)



Pull intake vent over blower pipe



Tighten cinch cord around blower pipe



Properly attached intake vent




Zip air vent closed




Turn on the air blower's power switch

STEP 4: INFLATE SCREEN

Close air vent(s) by zipping closed. Turn on the air blower's power switch. The Screen should inflate in less than a minute. The air blower should remain on to continuously maintain air pressure during use. Airflow through seams is normal. Do not try to seal seams.

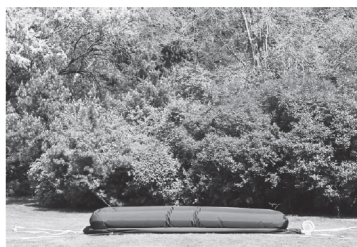

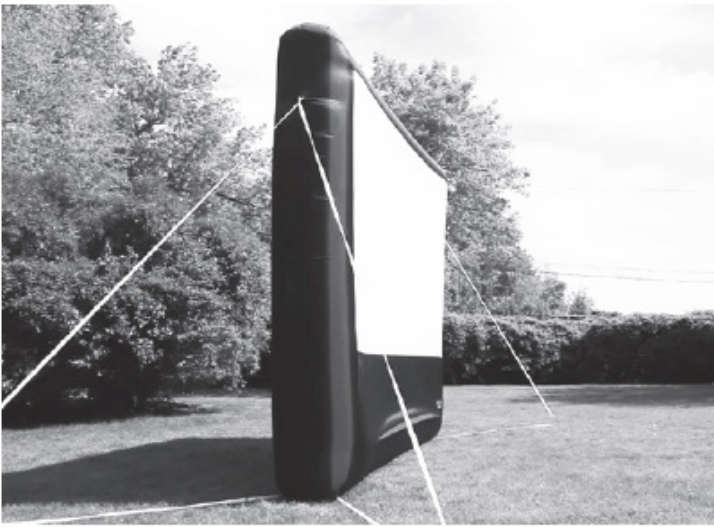

Preview of what screen will look like when properly inflated. Notice how there are two tethers attached to each corner of the screen, front and back.

SCREEN TAKEDOWN

Turn off air blower and guide screen down so that it folds in half (top to bottom, as shown on Step 1 of screen setup). Unzip the air vent and disconnect the intake sleeve from the air blower. Unclip or untie tethers from stakes. Remove stakes from ground and clean off any debris or dirt. Fold the screen from back to front a few times until it is in a long strip about two feet wide. Roll tightly and place in protective travel bag.

ATTENTION: Prevent the projection surface from touching the ground. **DO NOT** pack the screen if wet.



Rear side of screen

Uncoiled white tethers

Properly unfolded screen

Front side of screen with white projection surface inside of clamshell like form

**If you have any problems, please call immediately so we can help walk you through setup issues.
(860) 496-RENT (7368)**

