



DIY TENT SETUP INSTRUCTIONS

DIY CANOPY PARTS LIST



| PARTS | CANOPY SIZE | | |
|----------------|----------------|-------|-------|
| | 16x16 or 20x20 | 20x30 | 20x40 |
| SIDE POLE | 8 | 10 | 12 |
| CENTER POLE | 1 | 2 | 3 |
| STAKES | 12 | 14 | 16 |
| BAG WITH TOP | 1 | 1 | 1 |
| BAG FOR POLES | 1 | 1 | 1 |
| BAG FOR STAKES | 1 | 1 | 1 |

MANPOWER REQUIRED

Two Installers with experience should be able to assemble a DIY Canopy Tent in approximately 30 minutes.
For first time installers, a third hand is helpful

TOOLS REQUIRED

Sledge Hammer

INSPECT SITE

CAUTION:

Consult local utility company prior to installation. (CBYD 811)

Prior to assembly be sure to look around area for obstacles, pipes, wires, trouble, etc.

LAYOUT & CHECK

Use parts list for a quick identification and check list for proper quantities.


Please call immediately with any questions or concerns

(860) 496-RENT (7368)

1. LAYOUT AT SITE

20' x 20' canopy used as example. Spread drop cloths and unroll canopy at exact position of desired finished assembly. Any sharp objects which must remain on site under the canopy should be padded and taped.

Assemble side poles and lay straight out from each pole hole in canopy. Drive a stake 6'-0" out from each pole hole. The stake must be driven through the ring attached to each guy rope as shown.

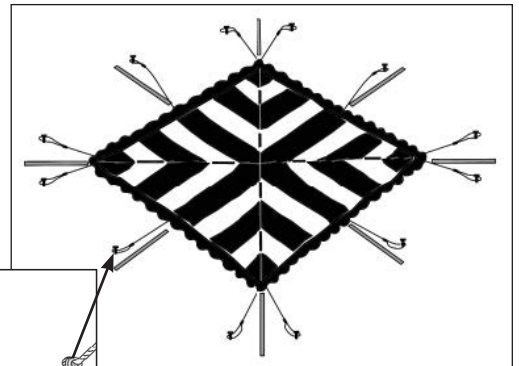

If equip, 5/8" Stake fits directly through ring on guy rope.




2. RAISE SIDE POLES

Start at opposite corners

Insert side poles into pole holes and raise so that bottom of poles slant toward center of canopy

Adjust guy rope.


Continue with other two corners and then sides.

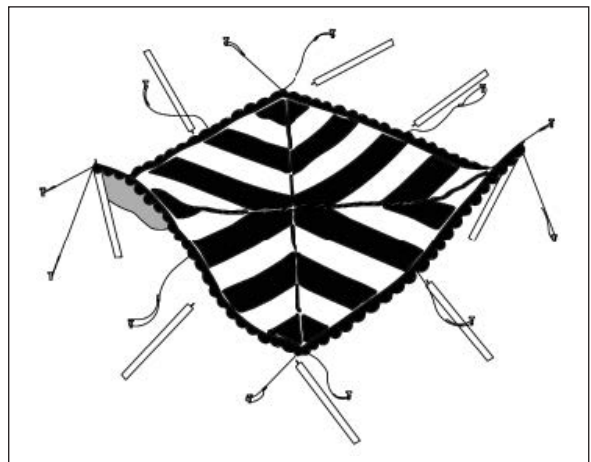

3. RAISE CENTER POLE

Assemble three-piece center pole and insert into center pole hole.

Raise to upright position and tie off jump rope to pole.

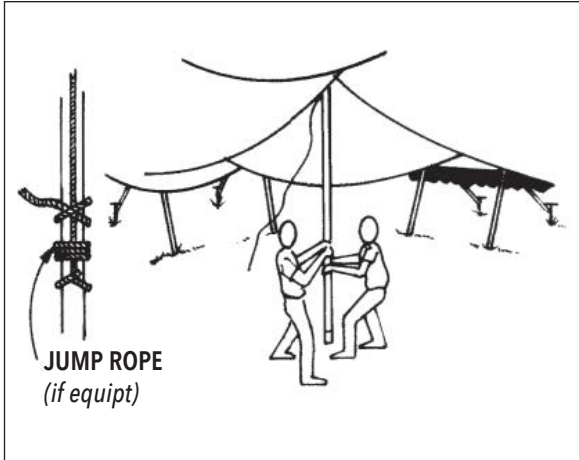


4. SIDE POLE ADJUSTMENT

Tighten guy ropes and then set side poles to upright position.

Adjust pole positions and guy rope tension to properly pull out canopy.

Protective covers are recommended for all stakes.

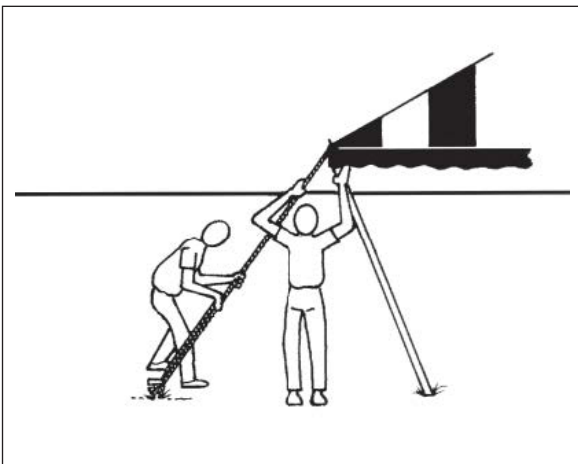

5. TAKE DOWN

Loosen all guy ropes.

Spread drop cloths.

Reverse steps 1 through 4 for disassembly.

IMPORTANT

Check guy ropes periodically for tightness and good condition. Stakes provided are for average soil conditions. Sandy soil or asphalt may require additional staking. Proper installation suitable to soil conditions is the responsibility of the renter. Store canopy in a cool, dry area.

Never store while wet or damp.

CAUTION:

1. For each installation, the installer is solely responsible for evaluating the site and the proper securing method determined. Some soils require different staking or securing than that provided with the tent. Due to this variety of soil conditions, these are the manufacturer's suggested sequence of installation procedures. Anchor's responsibility is limited to the manufacture of the tent parts and materials. We are not responsible for methods that installers may choose to erect and secure the tent to the ground.

2. The number of stakes suggested in the installation instructions do not necessarily meet all or any relevant codes on the site of the tent installation. The number of stakes suggested will, in many cases, keep the tent erected, however, due to various soil conditions; these stakes will be insufficient to keep the tent secure in high winds.

It is the tent installer's responsibility, not the manufacturer, to determine the appropriate number of stakes to meet the necessary wind loads on the site. Regardless of the number of stakes we suggest, we make no representation or warranty as to whether this specific number of stakes will meet the local tent code. Staking information provided in the installation instructions is not a suggestion about what is necessary to meet a site-specific load.

3. Inasmuch as the weather is unpredictable, good judgment and common sense must be incorporated within installation guidelines. It is the responsibility of the tent installer/maintainer to determine the severity of the weather, proper time and method of installation and/or erection and disassembly.

This product has been manufactured for use as a temporary structure. For the safety of all occupants, evacuation is recommended if threatening weather occurs, or if there is any doubt concerning the safe use of this product.

4. Proper safety equipment should be used at all times to insure a safe installation and take down. We suggest a careful evaluation be made to determine safety equipment needed, such as hard hats, steel-toe shoes, safety glasses and other as required. It is our desire that all installations are safe. Please be aware of hidden dangers both underground, i.e., gas lines, water lines, electrical lines, etc. and above the tent such as power lines and telephone lines.

**Your \$60 CASH DEPOSIT will be refunded
ONLY if this tent is returned:**

- ☆ **ON TIME**
- ☆ **DRY and IN THE BAG****
- ☆ **WITH ALL THE STAKES, ROPES AND POLES**

***If the tent is wet, please call us and let us know and we will let you leave it up and let it dry before striking and folding the canopy. It is fine to return the tent once it is DRY on Monday (or Tuesday.)*

*Proper number of stakes and poles is noted on each bag. Please count carefully!
Remove any ribbons or flags from ropes.*